

Resetting the speaker

Applies to:

- [SoundLink Revolve Bluetooth® speaker](#)
- [SoundLink Revolve+ Bluetooth® speaker](#)

A reset may help to correct minor processor errors — much like rebooting a computer. User settings are not lost during this reset.

1. **Connect** the speaker to power.
2. Press and hold the Multi-function button for 10 seconds.
3. While continuing to hold the Multi-function button, unplug the speaker from power.
4. Release the Multi-function button.
5. The system must be re-connected to power to complete **reboot**.



Factory reset

A factory reset clears paired mobile devices, language settings, and user settings from your speaker and returns it to the original factory settings.

Turn the speaker on

Unplug the speaker from power

6. **Connect** the speaker to power.
7. Press and hold the Power button for 10 seconds.
8. While continuing to hold the Multi-function button, unplug the speaker from power.
9. Release the Multi-function button.
10. The system must be re-connected to power to complete **reboot**.

