

# Ultimate Ears Megaboom 3

1.

**IMPORTANT:** A Factory Reset deletes all speaker settings including:

- Bluetooth Name
- Bluetooth Memory (all paired devices)
- WiFi settings
- Amazon/Alexa credentials
- You will need to go through the setup process again — we recommend that you go into the app and delete the speaker before you go through the setup process.

## **To perform a Factory Reset:**

1. Press the Volume “-” and Power buttons simultaneously and hold for at least six seconds.
2. You’ll hear a tone that indicates the reset was done and your speaker then should turn off. This reset will bring your speaker back to factory settings.
3. Turn your speaker back on using the Power button. The speaker will be in Bluetooth discovery/pairing mode.